

MAX Memory™ for Xbox 360 User Guide

VERY IMPORTANT

When you connect the Micro SD memory card that you are using with your MAX Memory to your PC some versions of Windows® will warn that the card needs formatting.

NEVER allow windows to format the memory card or you will lose all your data.

If you see this message, just click CANCEL. MAX Memory Card Manager will still be able to work with the card perfectly.



1. Introduction

Congratulations on your purchase of Datel's MAX Memory for Xbox 360.

Not only will your MAX Memory card provide you with fast, reliable storage space for your Xbox 360 game saves, it can also be expanded up to 16GB using widely available Micro SD memory cards (higher capacities may be supported when cards are available).

Use the included MAX Memory Card Manager PC software to browse the files stored on your MAX Memory card so they can be backed up and restored at the touch of a button.

2. Getting started

Product contents

Please check that nothing is missing from your Max Memory:

- MAX Memory card
 - Micro SD memory card (already inserted in your MAX Memory card, sizes will vary)
 - MAX Memory Card Manager PC software disc
 - This user guide
 - SD card reader
- Optional (where listed on the packaging)

If anything is missing, please contact your place of purchase.

3. Using Max Memory with your Xbox

Connect your memory card

MAX Memory is ready to use with your Xbox 360 straight out of the box. To get started:

1. Ensure that the included Micro SD memory card is securely installed in the MAX Memory card. If it is not, insert the Micro SD card into MAX Memory as shown in Section 4.
2. Connect the MAX Memory card to an empty memory card slot on your Xbox 360.

Do not remove the memory card when the Xbox 360 is reading from or writing to the card. Doing so may result in corruption to the memory card and loss of data.

Personalise your memory card

Memory cards can be given a name to help organise and identify them. To give your MAX Memory card a name, follow these steps:

1. Select 'SYSTEM SETTINGS', then 'MEMORY' on your Xbox's dashboard.
2. Select the memory card.
3. Choose 'OPTIONS' and then enter a name of your choice.

Copy or delete memory card content

Files stored on your memory card can be copied to another memory card or hard drive or deleted from the memory card to free up more space.


1. Select 'SYSTEM SETTINGS', then 'MEMORY' on your Xbox's dashboard.
2. Select the memory card.
3. Select 'OPTIONS' and then select the file(s) you would like to copy to another device or delete.

4. Using a new Micro SD card with MAX Memory

You can increase the capacity of your MAX Memory card by swapping the included Micro SD card for a higher capacity one. MAX Memory works with cards up to 16GB.

Because the Xbox 360 requires its memory cards to use a special file system you need to follow some simple steps the first time you use a new Micro SD card with MAX Memory.

First, carefully remove the Micro SD card that came with your MAX Memory then:

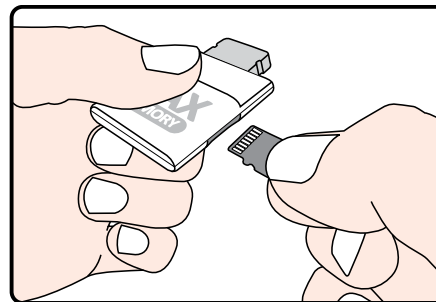

1. Slot the new Micro SD card into the MAX Memory card. The Micro SD card should be inserted with the contacts facing up as shown.
2. Plug the MAX Memory card into a free memory card slot on the Xbox 360.
3. Select 'SYSTEM SETTINGS' on the Xbox 360's dashboard.
4. Select 'MEMORY'.
5. Select the memory card.
6. Press the yellow (Y) button on your controller.
7. Select 'FORMAT'.

Once the format is complete your Micro SD card will now be correctly formatted for use with MAX Memory and your Xbox 360.

5. Getting started with MAX Memory Card Manager

MAX Memory Card Manager is a PC software application designed to make backing up and restoring your MAX Memory card as easy as possible.

System requirements

| | |
|------------------|---|
| Operating System | Windows XP (32bit, 64bit), Windows Vista (32bit, 64bit) |
| Connectivity | Built-in Micro SD memory card reader <i>or</i> USB Micro SD memory card reader (SDHC compatible reader required for 4GB and higher Micro SD memory cards) |

Installing the software

Insert the MAX Memory Card Manager software CD ROM into your PC. If setup does not run automatically, browse to your CD drive and double click the SETUP program. Follow the on-screen prompts until the software has successfully installed on your computer.

6. VERY IMPORTANT – Connecting to your Micro SD card

To use MAX Memory Card Manager to manage your memory card connect the card to your PC as follows:

1. Remove the Micro SD card from MAX Memory card.
2. Put the Micro SD memory card into a suitable adapter (included with some versions of MAX Memory).
3. Connect the adapter to your PC.

When you connect a Micro SD card that you are using with MAX Memory to your PC some versions of Windows will report that the card needs formatting. This is because the Xbox 360 uses a special file system that Windows does not understand.

You must NEVER allow Windows to format the memory card otherwise you will lose your data.

If you see this message, just click CANCEL. MAX Memory Card Manager will still be able to work with the card perfectly.

If you do accidentally allow Windows to format your Micro SD card, follow the instructions in Section 4 to reformat the card for use with your Xbox 360.

7. Backing up or restoring your entire memory card

Use MAX Memory Card Manager to create a backup of your entire memory card in one simple process. Should anything happen to your memory card, or should you wish to roll-back all of your files for some reason then you can restore the backup at any time.

1. Connect the Micro SD card to your computer as described in Section 4.
DO NOT let Windows® format the memory card if it tries.
2. Click on the 'BACKUP/RESTORE' tab in the top left corner of the application.
3. Click on the 'BACKUP' button on the right hand side of the screen.
4. Give the backup a name and click OK.
5. Wait a few minutes whilst the whole memory card is backed up to your PC.

You can change the location where the backups are stored by clicking on 'OPTIONS' in the top menu bar and then on 'FOLDERS' on the options dialogue.

Compressing your back ups

Enable the 'COMPRESS BACKUPS' option by ticking the appropriate box on the backup dialogue box to have your backups compressed. Compressing your backups will typically reduce their size by up to 90% but will increase the time taken to back up a memory card.

8. Managing individual files

Use MAX Memory Card Manager to back up and restore individual files.

For any actions copying files to or from your memory card, ensure you have the Micro SD memory card connected to your PC (see Section 4) then follow these steps:

Copy an individual file to your PC

1. Click the 'CONTENT-CARD' tab to view the files stored on your Micro SD memory card.
2. Click on a file that you would like to copy to your PC. You can select multiple files by holding the 'CTRL' key whilst making your selections.
3. Click the 'TO PC' button to copy the selected files to your PC.

Once a file has been copied to your PC, you can restore it to your memory card at any time (see next section).

Restore an individual file to your memory card

Any file that has been copied to your PC can be restored to your memory card. If you haven't copied any files to your PC first do so by following the instructions in the previous section.

1. Click on the 'CONTENT-PC' tab to view the files you have copied to your PC from your memory card.
2. Click on a file that you would like to restore to your memory card. You can select multiple files by holding the 'CTRL' key whilst making your selections.
3. Click on the 'TO MEMCARD' button to copy the selected files to the Micro SD memory card.

9. Technical support and customer service

If you are experiencing problems with your MAX Memory please check troubleshooting section on <http://us.codejunkies.com/support/> where a troubleshooting FAQ has been created for this product.

Before contacting Datel's customer service department, please ensure that you have read through and understood the information in this user guide and checked the online troubleshooting guide. If you do need to call, please ensure that you have information on when and where you purchased this product to hand.

Datel Customer Services Europe

Customers Services, Datel Design & Development Ltd
Stafford Road, Stone, STAFFS. ST15 0DG
UNITED KINGDOM

Email: support@datel.co.uk

Web: <http://uk.codejunkies.com/support>

Datel Customer Services USA

ATTN: Customer Services, Datel Design & Development Inc
33 North Garden Avenue, Suite 900, Clearwater, FL 33755
UNITED STATES

Email: support@dateldesign.com

Web: <http://us.codejunkies.com/support>

Customer Service: <http://www.datelcustomerservice.com>

© 2009 Datel Design & Development Ltd. MAX Memory is a trademark of Datel Design and Development Ltd.

MAX Memory is a 100% unofficial product and is NOT sponsored, endorsed or approved by MICROSOFT, nor any games developer or publisher. Window and Xbox 360 are trademarks or registered trademarks of MICROSOFT in the United States and/or other countries. All other trademarks are the property of their respective owners.